

# Smartkick X7 Series Instrument Setup Instructions

## Screen fault code definition:

Fault display A: Communication fault between instrument and controller

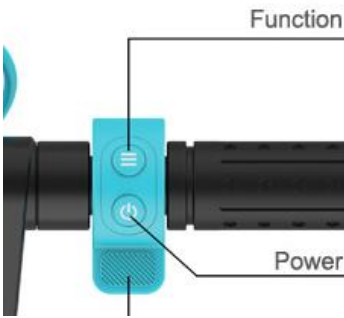
Fault display B: Accelerator fault;

Fault display C: Motor Hall fault

## Menu Settings Definitions:

Item	Function	Parameter Description		
P0	Kilometer /Mile Selection	Kilometers: 0	Mile: 1	
P1	Cruise Setting	Non-cruise: 0	Cruise: 1	
P2	Autostart Setting	Non-speed autostart set: 0	Min. speed autostart: 1	
P3	Wheel Diameter Selection	8.5-inch: 85	10-inch: 10	
P4	Speed setting of the Max Gear	Max speed 20km/h: 20	Max speed 25km/h: 25	No speed limit: FF

## Setting Method

	1. Press the power button and the function key at the same time to enter the menu setting, and the screen will display "PO ".
	2. Press the function key to select the setting item from P0 to P4.
	3. Press the power button to enter the P* setting.
	4. Press the function key to set the required values, as shown in the table above.
	5. Press the power button to exit the P* setting item.
	6. Press the power button and the function button at the same time to exit the menu setting.